

Installation, Operation, Maintenance Instructions

Pneumatic Diaphragm On-Off Actuators

Series 2, Type: P5

Index	
1	Using Kämmer valves and actuators correctly.
2	Unpacking
3	Installation
4	Quick check
5	Maintenance
6	Remove and install actuator
7	Reverse actuator action
8	Disassemble and assemble actuator
9	Troubleshooting chart

1 USING KÄMMER VALVES AND ACTUATORS CORRECTLY

1.1 General

The following instructions are designed to assist in unpacking, installing and performing maintenance as required on Kämmer products. Product users and maintenance personnel should thoroughly review this bulletin prior to installing, operating or performing any maintenance.



DANGER: *In most cases Kämmer valves and actuators are designed for specific applications (e.g. with regard to medium, pressure, temperature). For this reason they should not be used in other applications without first contacting the manufacturer.*

1.2 Terms concerning safety

The safety terms **DANGER**, **WARNING**, **CAUTION** and **NOTE** are used in these instructions to highlight particular dangers and/or to provide additional information on aspects that may not be readily apparent.



DANGER: *indicates that death, severe personal injury and/or substantial property damage will occur if proper precautions are not taken.*



WARNING: *indicates that death, severe personal injury and/or substantial property damage can occur if proper precautions are not taken.*



CAUTION: *indicates that minor personal injury and/or property damage can occur if proper precautions are not taken.*



NOTE: *indicates and provides additional technical information, which may not be very obvious even to qualified personnel. Compliance with other, not particularly emphasised notes, with regard to transport, assembly, operation and maintenance and with regard to technical documentation (e.g. in the operating instruction, product documentation or on the product itself) is essential, in order to avoid faults, which in themselves might directly or indirectly cause severe personal injury or property damage.*

1.3 Protective clothing

Kämmer products are often used in problematic applications (e.g. extremely high pressures, dangerous, toxic or corrosive mediums). In particular valves with bellows seals point to such applications. When performing service, inspection or repair operations always ensure, that the valve and actuator are depressurised and that the valve has been cleaned and is free from harmful substances. In such cases pay particular attention to personal protection (protective clothing, gloves, glasses etc.).

1.4 Qualified personnel

Qualified personnel are people who, on account of their training, experience and instruction and their knowledge of relevant standards, specifications, accident prevention regulations and operating conditions, have been authorised by those responsible for the safety of the plant to perform the necessary work and who can recognise and avoid possible dangers.

1.5 Installation



DANGER: *Before installation check the order-no, serial-no. and/or the tag-no. to ensure that the valve/actuator is correct for the intended application.*

Do not insulate extensions that are provided for hot or cold services.

Pipelines must be correctly aligned to ensure that the valve is not fitted under tension.

1.6 Spare parts

Use only Kämmer original spare parts. Kämmer cannot accept responsibility for any damages that occur from using spare parts or fastening materials from other manufactures. If Kämmer products (especially sealing materials) have been on store for longer periods check these for corrosion or deterioration before using these products. Fire protection for Kämmer products must be provided by the end user.

1.7 Service / repair

To avoid possible injury to personnel or damage to products, safety terms must be strictly adhered to. Modifying this product, substituting nonfactory parts, or using maintenance procedures other than outlined in this instruction could drastically affect performance and be hazardous to personnel and equipment, and may void existing warranties. Between actuator and valve there are moving parts. To avoid injury Flowserve provides pinch-point-protection in the form of cover plates, especially where side-mounted positioners are fitted. If these plates are removed for inspection, service or repair special attention is required. After completing work the cover plates must be refitted. Apart from the operating instructions and the obligatory accident prevention directives valid in the country of use, all recognised regulations for safety and good engineering practices must be followed.



WARNING: Before products are returned to Kämmer for repair or service Kämmer must be provided with a certificate which confirms that the product has been decontaminated and is clean. Kämmer will not accept deliveries if a certificate has not been provided (a form can be obtained from Kämmer).

1.8 Storage

In most cases Kämmer Products are manufactured from stainless steel. Products not manufactured from stainless steel are provided with an epoxy resin coating. This means that Kämmer products are well protected from corrosion. Nevertheless, Kämmer products must be stored adequately in a clean, dry environment. Plastic caps are fitted to protect the flange faces and to prevent the ingress of foreign materials. These caps should not be removed until the valve is actually mounted into the system.

1.9 Valve and actuator variations

These instructions cannot claim to cover all details of all possible product variations, nor in particular can they provide information for every possible example of installation, operation or maintenance. This means that the instructions normally include only the directions to be followed by qualified personal where the product is being used for its defined purpose. If there are any uncertainties in this respect particularly in the event of missing product-related information, clarification must be obtained via the appropriate FLOWSERVE sales office.

2 UNPACKING

2.1 Each delivery includes a packing slip. When unpacking, check all delivered valves and accessories using this packing slip.

2.2 Larger valves can be lifted using slings on the yoke rods or, if present, on the lugs provided for this purpose. If slings are used, attach them so that the outer tubing or attaching parts are not damaged.



WARNING: If slings are used, be aware that the centre of gravity of the valve may be above the lifting point. In this case, secure or support the valve against rotating, to prevent damage or personnel injury.

2.3 Report transport damage to the carrier immediately.

2.4 In case of discrepancies, contact your nearest FLOWSERVE sales office.

3 INSTALLATION

3.1 Clean tubing prior to installing.

3.2 If possible, install the valve in an upright position (actuator on top), to ease maintenance. An upright installation position is important with low-temperature applications, in order to keep the distance between the packing material and the medium as large as possible. The packing material then retains the ambient temperature as much as possible.



NOTE: Do not insulate extension bonnets that are provided for hot or cold services

3.3 Make sure that sufficient overhead clearance above the actuator is maintained, to allow for disassembly of plug from the valve body (see following table).

Actuator size	Clearance (mm)	Actuator size	Clearance (mm)
37/47	95	P2	140
38/48	140	P3	140
39/49	140	P4	140
39D/49D	140	P5	140

3.4 After installing, check direction of flow again. The direction of flow is shown by the arrow on the housing.

3.5 If the valve is to be welded into the line, make sure that the valve is shielded from excessive heat.

3.6 Connect supply pressure and signal lines. Control valves are supplied with a positioner. The end connections for supply pressure and signal are clearly marked. Series 4 actuators and positioners are suitable for max. 4.2 bar (60 psi) supply pressure. If the supply pressure exceeds the pressure specified on the nameplate, a pressure reducing station is required. If instrument air is not available, install an oil separator/air filter in the air inlet line. All connections must be leak free.

4 QUICK CHECK

Before operating, check the valve as follows:

- 4.1 Open and close the valve, and observe the movement of the actuator stem. The movement must be smooth and linear.
- 4.2 Check for maximum stroke through change of signal (for pneumatic positioners, 0.2 - 1.0 bar or corresponding split-range values; for IP positioners, 4-20 or 0-20 mA).
- 4.3 Check all air connections for leaks.
- 4.4 Tighten packing nut (see table 1).

Thread	Torque Nm	
	PTFE	Grafoil
M20 x 1,5	1	3
M30 x 1,5	6	15
M38 x 1,5	15	35
M45 x 1,5	17	40

Table 1



NOTE: *An excessively tightened gland nut can cause excessive packing wear and can hinder the free movement of the plug stem.*

- 4.5 Check fail-safe position. To do this, close supply pressure and observe whether the valve opens or closes as defined.
- 4.6 After use at fluctuating temperatures, re-tighten all bolt connections and check for leaks.

5 MAINTENANCE

Check valves for correct functioning at regular intervals (at least once every 6 months) as follows. This check can be made when installed and in many cases without interrupting production. If internal defects are suspected, see section „Disassembly and Assembly of Valve“.

- 5.1 Examine gaskets for leaks and if necessary re-tighten bolts (see Fig. 1).
- 5.2 Check bellows gasket and test connection - if present - for external leaks.
- 5.3 Check valve for damage caused by corrosive residues or corrosive vapours.
- 5.4 Clean valves and repaint as necessary.



Warning: *To prevent a buildup of electrostatic charge clean the actuator/valve with a damp cloth only.*

- 5.5 Check gland nut for correct torque (see table 1).



NOTE: *An excessively tightened gland nut can cause excessive packing wear and can hinder the free movement of the plug stem.*

- 5.6 If possible, open and close valve and check for maximum stroke and smooth movement of the plug stem. Irregular movement of the plug stem may indicate internal defects.



NOTE: *With graphite packing, irregular movement of the plug stem is normal.*



WARNING: *Keep hands, hair, clothing, etc. away from all moving parts. Failure to do so can lead to serious injury.*

- 5.7 Check all accessories for firm seating.
- 5.8 If possible, close supply pressure and check the fail-safe position.
- 5.9 Check stem boot for wear.
- 5.10 Check actuator for leaks. To do this, spray housing, air connections and plug stem guide with leak spray and check for any bubble formation.
- 5.11 Clean plug stem.
- 5.12 Check air filter, if present, and if necessary replace insert.



Note: *For further information regarding service and maintenance please contact your nearest FLOWSERVE office.*

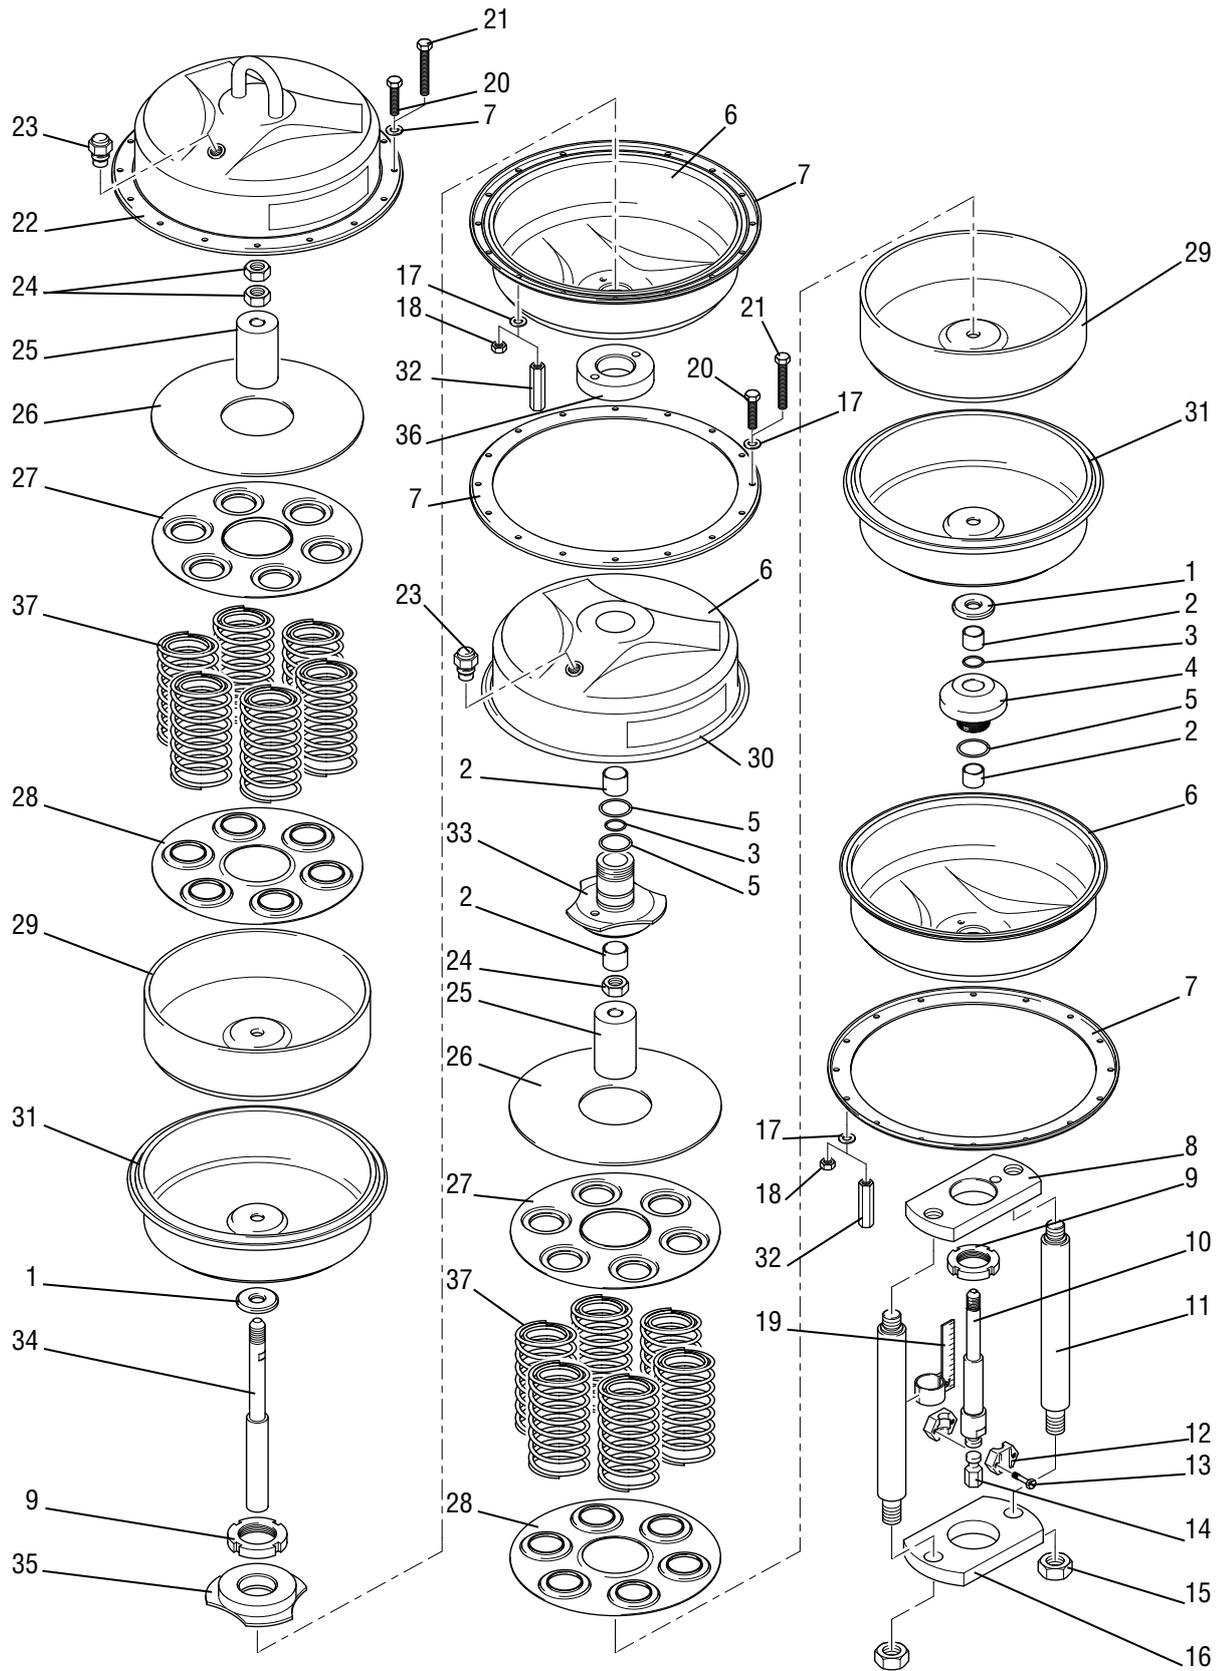


Fig. 1: Series 5 On-Off Actuator, Air-to-Open

1	A 30 00 90 05	Washer	20	0 10 02 24 A2	Screw M 6 x 30
2	A AG 01 25 ID	Bushing	21	0 10 02 31 A2	Screw M 6 x 110
3	A AG 00 25 UL	O-Ring 22 x 2	22	A 60 00 20 01	Upper body
4	A 30 00 80 00	Guide	23	0 36 06 00 PA	Vent plug
5	A AG 00 35 NB	O-Ring 32,99 x 2,62	24	0 10 00 69 A2	Nut, M 16
6	A 60 00 30 01	Lower body	25	A 60 01 02 AP	Spacer
7	A 60 00 50 01	Flange	26	A 60 00 75 01	Plate
8	A PS 03 28 05	Yoke plate	27	A 60 00 70 01	Spring plate
9	0 10 03 89 A2	Nut M 38 x 1,5	28	A 60 00 71 01	Spring plate
10	A 60 01 35 05	Actuator stem	29	A 60 00 60 01	Piston
11	A PS 03 70 05	Yoke rod	30	A AG 06 03 Al E	Sticker
12	A AG 05 10 81	Coupling half.	31	A 60 00 10 EC	Diaphragm
13	A AG 05 30 A2	Screw	32	A 60 00 86 71	Nut M 6 x 95
14	A AG 05 70 05	Coupling insert	33	A 60 00 98 05	Guide
15	0 10 03 36 A2	Nut, M10	34	A 60 01 51 05	Actuator stem
16	A PS 01 02 05	Yoke plate	35	A 60 00 94 05	Spacer ring
17	0 10 00 34 A2	Washer, Ø 6,4	36	A 60 00 95 05	Intermediate ring
18	0 10 03 34 A2	Nut, M 6	37*	—	Spring set
19	0 36 01 80 00	Travel indicator, assy.			

* Do not change the spring set thrust or increase the air supply pressure without first consulting the manufacturer.

Service to the actuator is best performed when the actuator is removed from the valve body. For the purpose of these instructions, consider the actuator as a separate subassembly with the procedures described in these instructions being performed on a bench. However, many service repairs and adjustments can be accomplished in the field while the actuator and valve body are still connected to each other.



NOTE: *The trim is a very vulnerable. Great care must be taken to prevent damage to the plug and seat facings.*

The upper yoke plate (8) and the yoke rods (11) are always removed and replaced with the actuator.

6 REMOVING AND INSTALL ACTUATOR

6.1 REMOVING ACTUATOR

(refer to Fig. 1)

6.1.1 Shut off air supply.



WARNING: *Depressurise the line to atmospheric pressure and drain all fluids from the valve before working on the actuator. Failure to do so can cause serious injury.*

6.1.2 Disconnect all tubing.

6.1.3 Remove 2 screws (13) and remove coupling (12).

6.1.4 Remove yoke rod retaining nuts (15) and lift actuator assembly from the valve.

6.1.5 Remove coupling insert (14) and it's locknut from plug stem.



NOTE: *Ensure that the plug assembly is not rotated with the plug seated. This may cause irreparable damage to the seating faces.*

6.2 INSTALL ACTUATOR

(refer to Fig. 1)

The actuator stem must be fully extended:
Actuators with air-to-open action must be fully vented. Actuators with air-to-close action apply supply pressure. Manually depress the plug stem to ensure the plug is fully seated.

6.2.1 Screw coupling insert locknut and coupling insert as far as possible onto plug stem.

6.2.2 Place the actuator assembly on the valve engaging the yoke rod threads in the lower yoke plate and ensuring the actuator faces in the correct direction.


6.2.3 Unscrew the coupling insert until the yoke rods are raised from the lower yoke plate by around 2 mm.



NOTE: *Ensure that the plug assembly is not rotated with the plug seated. This may cause irreparable damage to the seating faces.*

6.2.4

Refit the coupling (12), ensuring that the arrows, embossed on the coupling halves, point upward towards the actuator, and secure with 2 retaining screws (13).

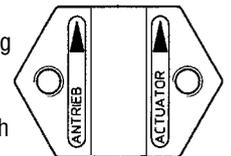

6.2.5

Apply supply pressure resp. vent actuator to half stroke and refit and tighten yoke rod retaining nuts (15).

6.2.6

Connect all tubing.

7

REVERSE THE ACTUATOR ACTION

(refer Fig. 1)



DANGER: *Actuators with "spring-to-close" action can be disassembled and reassembled by using long (de)compression screws. A suitable press is required to disassemble and reassemble actuators with "spring-to-open" action or to reverse the actuator action.*

7.1

Reverse actuator action from spring-to-close to spring-to-open

7.1.1

As required remove the actuator from the valve as described in section 1.1.

7.1.2

If long (de)compression screws are not already fitted to the actuator: remove 4 equally spaced case retaining screws (20).

- 7.1.3 Insert 4 x 110 mm long (de)compression screws (21) and tighten the nuts hand tight.
- 7.1.4 Remove all the remaining short case retaining screws (20).
- 7.1.5 Unscrew the long compression screws (21) in equal measures until the actuator springs are fully decompressed and the upper case is loose.
- 7.1.6 Remove the upper case half.
- 7.1.7 Secure the actuator stem (34) against rotating with a wrench across the flats on the stem's lower part and remove the lock nuts (24).
- 7.1.8 Remove following parts:
spacer (25), plate (26), spring plate (27), spring set (37), spring plate (28), piston (29) diaphragm (31) and washer (1)
-  **NOTE:** *It is not necessary to remove the nut (9). The body halves (6) with spacer ring (35) and intermediate ring (36) can be removed as an assembly.*
- 7.1.9 Disassemble the lower actuator assembly as described in sections 7.1.2 to 7.1.8.
- 7.1.10 Replace the parts in reverse order.
- 7.1.11 With a suitable press compress the spring set.
- 7.1.12 Secure the actuator stem (10) from rotating with a wrench across the flats on the stem's lower part and torque the nut (24) to 35 Nm. Replace and tighten the actuator stem (34) and secure with loctite 221.
- 7.1.13 Replace the upper case half.
- 7.1.14 Insert and tighten the upper case retaining screws (20) in equal measures to a torque value of 12 Nm.
- 7.1.15 Assemble the upper actuator as described in sections 7.1.10 to 7.1.12.
- 7.1.16 Secure the actuator stem (34) from rotating with a wrench across the flats on the stem's lower part and torque the nut (24) to 35 Nm. Replace locknut (24) and secure with loctite 221.
- 7.1.17 Replace the upper case half.
- 7.1.18 Insert and tighten the upper case retaining screws (20) in equal measures to a torque value of 12 Nm.
- 7.1.19 As required refit the actuator assembly to the valve as described in section 1.2.
- 7.2 Reverse actuator action from spring-to-open to spring-to-close**
- 7.2.1 As required remove the actuator from the valve as described in section 1.1.
- 7.2.2 Remove all case retaining screws (20).
- 7.2.3 Remove the upper case half (22).
- 7.2.4 With a suitable press compress the spring set.
- 7.2.5 Secure the actuator stem (34) against rotating with a wrench across the flats on the stem's lower part and remove the lock nuts (24).
- 7.2.6 Remove following parts:
washer (1), diaphragm (31), piston (29), spring plate (28), spring set (37), spring plate (27), plate (26) and spacer (25).
-  **NOTE:** *It is not necessary to remove the nut (9). The body halves (6) with spacer ring (35) and intermediate ring (36) can be removed as an assembly.*
- 7.2.7 Disassemble the lower actuator as described in sections 7.2.2 to 7.2.6.

- 7.2.8 Replace the parts in reverse order.
- 7.2.9 Secure the actuator stem (10) from rotating with a wrench across the flats on the stem's lower part and torque the nut (32) to 35 Nm. Replace and tighten the actuator stem (34) and secure with loctite 221.
- 7.2.10 Release the press and replace the upper case half.
- 7.2.11 Insert 4 x 110 mm long (de)compression screws (21) through the upper and lower actuator case halves and tighten with long nuts (31) in equal measures until the casing halves contact.
- 7.2.12 Insert and tighten all remaining short case retaining screws (20) in equal measures to a torque value of 12 Nm.
- 7.2.13 Assemble the upper actuator as described in sections 7.2.8 to 7.2.11.
- 7.2.14 Secure the actuator stem (34) from rotating with a wrench across the flats on the stem's lower part and torque the nut (24) to 35 Nm. Replace locknut (24) and secure with loctite 221.
- 7.2.15 Replace upper body
- 7.2.16 Insert and tighten the upper case retaining screws (20) in equal measures to a torque value of 12 Nm.
- 7.2.17 As required refit the actuator assembly to the valve as described in 1.2.

8 DISASSEMBLE AND ASSEMBLE ACTUATOR

(refer to fig. 1)



DANGER: *Actuators with "spring-to-close" action can be disassembled and reassembled by using a press or long (de)compression screws. A suitable press **is** required to disassemble and reassemble actuators with "spring-to-open" action or to reverse the actuator action.*

8.1 DISASSEMBLE ACTUATOR

8.1.1 Actuator action spring-to-close

- 8.1.1.1 As required remove the actuator from the valve as described in section 1.1.
- 8.1.1.2 If long (de)compression screws are not already fitted to the actuator: remove 4 equally spaced case retaining screws (20).
- 8.1.1.3 Insert 4 x 110 mm long (de)compression screws (21) and tighten the nuts hand tight.
- 8.1.1.4 Remove all the remaining short case retaining screws (20).
- 8.1.1.5 Unscrew the long compression screws (21) in equal measures until the actuator springs are fully decompressed and the upper case is loose.
- 8.1.1.6 Remove the upper case half.
- 8.1.1.7 Secure the actuator stem (34) against rotating with a wrench across the flats on the stem's lower part and remove the lock nuts (24).
- 8.1.1.8 Remove following parts:
spacer (25), plate (26), spring plate (27), spring set (37), piston (29), spring plate (28), diaphragm (31) and washer (1)
- 8.1.1.9 Disassemble the lower actuator as described in sections 8.1.1.3 to 8.1.1.8.
- 8.1.1.10 With a hooked spanner loosen and remove the slotted nut (9).
- 8.1.1.11 Remove the guide (4) and upper yoke plate (8).

8.1.2 Actuator action spring-to-open

- 8.1.2.1 As required remove the actuator from the valve as described in section 1.1.
- 8.1.2.2 Remove all case retaining screws (20).
- 8.1.2.3 Remove the upper case half (22).
- 8.1.2.4 With a suitable press compress the spring set.
- 8.1.2.5 Secure the actuator stem (34) against rotating with a wrench across the flats on the stem's lower part and remove the lock nuts (24).
- 8.1.2.6 Remove following parts:
washer (1), diaphragm (31), piston (29), spring plate (28), spring set (37), spring plate (27), plate (26) and spacer (25).
- 8.1.2.7 Disassemble the lower actuator as described in sections 8.1.2.2 to 8.1.2.6.
- 8.1.2.8 With a hooked spanner loosen and remove the slotted nut (9).
- 8.1.2.9 Remove the guide (4) and upper yoke plate (8).

8.2 ASSEMBLE ACTUATOR

(refer to Figs. 1 and 2)

8.2.1 Actuator action spring-to-close

- 8.2.1.1 Insert the guide (4) into the lower body half.
- 8.2.1.2 Replace the upper yoke plate ensuring that the nose in the lower body rests in the bore of the upper yoke plate (see fig. 2).

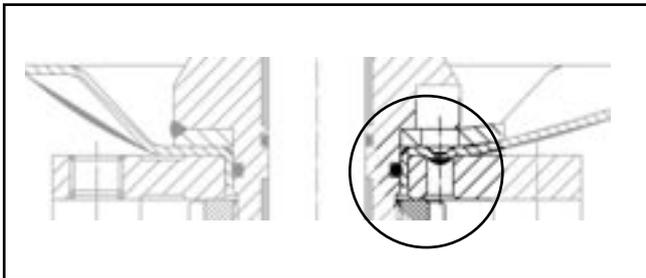


Fig. 2: Anti-rotation device

- 8.2.1.3 Refit the slotted nut (9) and tighten with a hooked spanner.
- 8.2.1.4 Refit the actuator stem (10), washer (1), diaphragm (31), piston (29), spring plate (28), spring set (37), spring plate (27), plate (26) and spacer (25)
- 8.2.1.5 Secure the actuator stem (10) from rotating with a wrench across the flats on the stem's lower part and torque the nut (24) to 35 Nm. Replace and tighten actuator stem (34) and secure with loctite 221.
- 8.2.1.6 Replace the upper case half.
- 8.2.1.7 Insert 4 x 100 mm long (de)compression screws (21) through the upper and lower actuator case halves and tighten with long nuts (31) in equal measures until the casing halves contact.
- 8.2.1.8 Insert and tighten all remaining short case retaining screws (20) to a torque value of 12 Nm.
- 8.2.1.9 Assemble the upper actuator as described in sections 8.2.1.4 to 8.2.1.8.
- 8.2.1.10 Secure the actuator stem (34) from rotating with a wrench across the flats on the stem's lower part and torque the nut (24) to 35 Nm. Replace locknut (24) and secure with loctite 221.

- 8.2.1.11 Replace the upper case half.
- 8.2.1.12 Insert and tighten the upper case retaining screws (20) in equal measures to a torque value of 12 Nm.
- 8.2.1.13 As required refit the actuator assembly to the valve as described in section 1.2.

8.2.2 Actuator action spring-to-close

- 8.2.2.1 Insert the guide (4) into the lower body half.
- 8.2.2.2 Replace the upper yoke plate ensuring that the nose in the lower body rests in the bore of the upper yoke plate (see fig. 2).
- 8.2.2.3 Refit the slotted nut (9) and tighten with a hooked spanner.
- 8.2.2.4 Refit the actuator stem (10), spacer (25), plate (26), spring plate (27), spring set (37), spring plate (28), piston (29), diaphragm (29) and washer (1).
- 8.2.2.5 With a suitable press compress the spring set.
- 8.2.2.6 Secure the actuator stem (10) from rotating with a wrench across the flats on the stem's lower part and torque the nut (24) to 35 Nm. Replace and tighten actuator stem (34) and secure with loctite 221.
- 8.2.2.7 Release the press and replace the upper case half.
- 8.2.2.8 Insert and tighten the case retaining screws (20) in equal measures to a torque value of 12 Nm.
- 8.2.2.9 Assemble the upper actuator as described in sections 8.2.2.4 to 8.2.2.8.
- 8.2.2.10 Secure the actuator stem (34) from rotating with a wrench across the flats on the stem's lower part and torque the nut (24) to 35 Nm. Replace and tighten locknut (24) and secure with loctite 221.
- 8.2.2.11 Release the press and replace the upper case half.
- 8.2.2.12 Insert and tighten the case retaining screws (20) in equal measures to a torque value of 12 Nm.
- 8.2.2.13 As required refit the actuator assembly to the valve as described in section 1.2.

8.3 NAMUR ACCESSORIES

(see Fig. 3)

- 8.3.1 Accessories according to NAMUR can be fitted by flanging them to the yoke. A special coupling half with threaded bosses is available to connect the actuating lever (see spare parts list for part-no.).

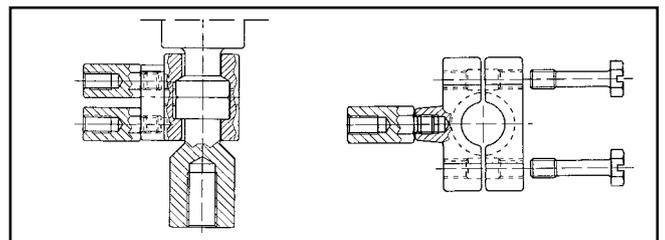


Fig. 3: NAMUR coupling half

9 Troubleshooting chart

Problem	Possible cause	Corrective Action
Stem pulsates	1. Unstable air supply 2. Vent or passage blocked	2. Adjust air supply 3. Clean vent or passage
Actuator slow	1. Air supply too low 2. Diaphragm case leaks air 3. Spring case vent blocked	1. Adjust air supply 2. Seal diaphragm case 3. Renew vent
Actuator will not return to end position	1. Air supply too low 2. Broken actuator spring 3. Actuator movement blocked	1. Adjust air supply 2. Renew all actuator springs 3. Dissassemble actuator and check
Actuator will not return to the failsafe position	1. Actuator not vented 2. Broken actuator spring 3. Actuator movement blocked	1. Vent actuator 2. Renew all actuator springs 3. Dissassemble actuator and check

Regional Headquarters
Flowserve EMA

Burrell Road, Hayward Heath
West Sussex, RH16 1TL
England
Telephone: +44 (0) 1444 314400
Facsimile: +44 (0) 144 3144401

Flowserve America

1350 N. Mt. Springs Prkwy.
Springville, UT 84663
USA
Telephone: +1 801 489 8611
Facsimile: +1 801 489 3719

Flowserve Asia

12 Tuas Avenue 20
638824
Republic of Singapore
Telephone: +65 862 3332
Facsimile: +65 862 4940

Main Sales Offices EMA (Europe, Middle East, Africa)
Flowserve France

7 Avenue de la Libération
63300 Thiers Cedex
France
Telephone: +33 (0) 4 73 80 42 66
Facsimile: +33 (0) 4 73 80 14 24

Flowserve UK

Station Road
Pershore, Worcestershire
England WR102BZ
Telephone: +44 (0) 1386 55 45 51
Facsimile: +44 (0) 1386 55 49 68

Flowserve Switzerland

Allee du Quartz 1
CH-2300 La-Chaux-de Fonds
Switzerland
Telephone: +41 (0) 32 925 9700
Facsimile: +41 (0) 32 926 5422

Flowserve Germany

Manderscheidtstr. 19
45141 Essen
Germany
Telephone: +49 (0) 201 8919 5
Facsimile: +49 (0) 201 8919 662

Flowserve South Africa

Units 1 and 2
26, Imvuba Road, Sebenza Ext 6
Edenvale, Gauteng
Edenglen 1613
South Africa
Telephone: +27 11 609 2094
Facsimile: +27 11 609 3735

Flowserve Middle-East

C/O Saleh & Abdulaziz Abahsain
P.O. Box 209
Al Khobar 31952
Saudi Arabia
Telephone: 9663 857 3442
Facsimile: 9663 859 5284

Flowserve Austria

Kasernengasse 6
9500 Villach
Austria
Telephone: +43 (0) 424241 181-0
Facsimile: +43 (0) 424241 181 50/51

Flowserve Benelux

Van Leeuwenhoekweg 6
3225 LX Hellevoetsluis
The Netherlands
Telephone: +31 (0) 181 330044
Facsimile: +31 (0) 181 330040

Flowserve Italy

Via Prealpi, 30
Cormano (Milano)
Italy Spain
Telephone: +39 (0) 2663251
Facsimile: +39 (0) 26151863

Flowserve Spain

Luis Cabrera, 86-88
E-28002 Madrid
Portugal
Telephone: +34 9 15 152 032
Facsimile: +34 9 14 136 747

Flowserve Portugal

Av. Dr. Antunes Guimaraes, 1159
Porto 4100-082
Sweden
Telephone: +351 22 619 8770
Facsimile: +351 22 619 7575

Flowserve Scandinavia

Gelbgjutaregatan
58933 Linköping, Östergötland
Telephone: +46 13 316100
Facsimile: +46 13 136054

Flowserve Eastern Europe

12, av. du Québec
91965, Courtaboeuf Cedex
France
Telephone: +33 (0) 1 60 923 251
Facsimile: +33 (0) 1 60 923 299